



I. Check all parts of the antenna

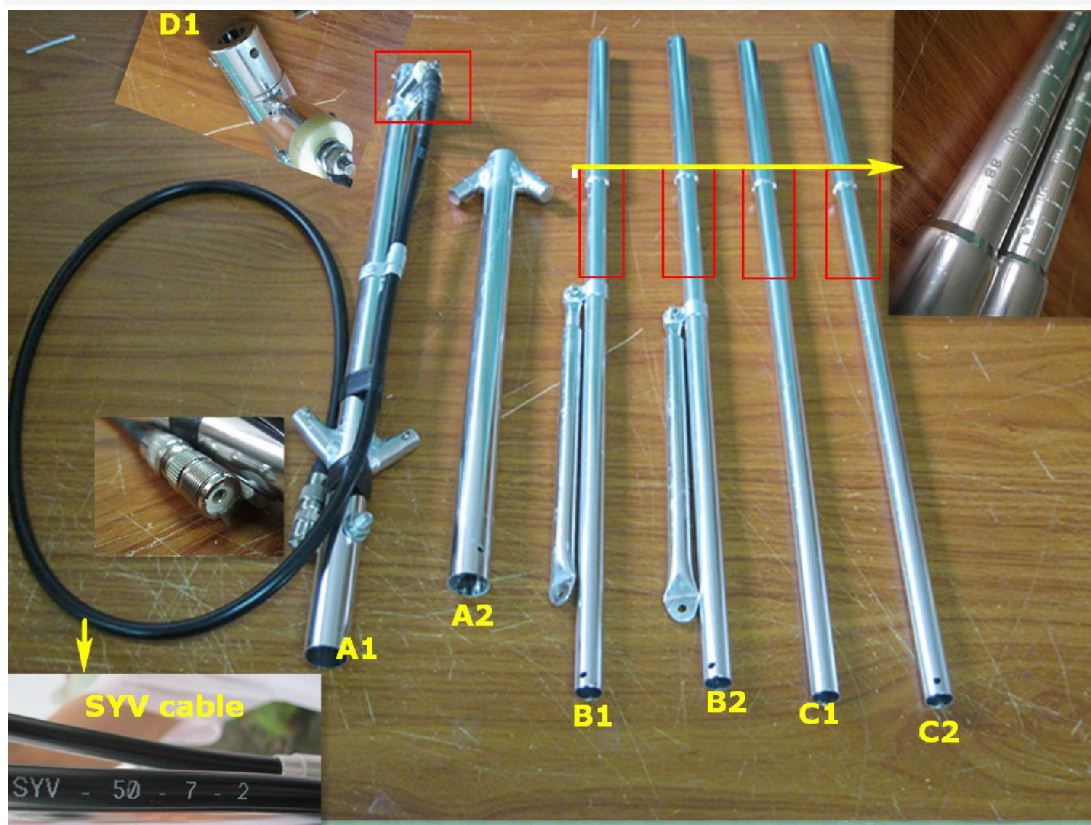

I. All parts of the antenna


After you have received the antenna package, check and make sure the items **shown in above picture** are included

II. Install the main mast of antenna

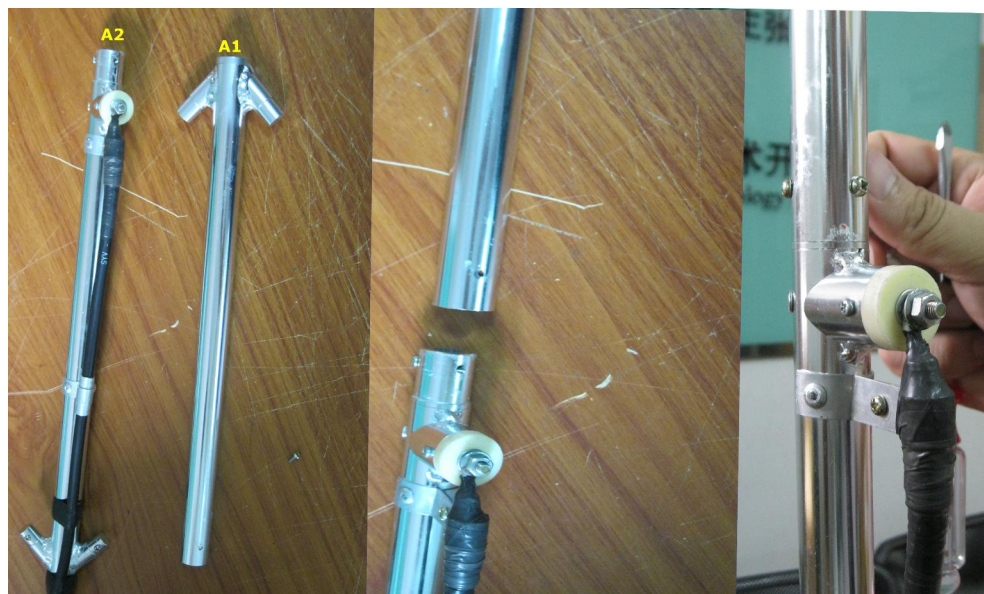


Connect A1 and A2. A1 is up and A2 is down.

III. Lock B1 and B2 on the mainmast

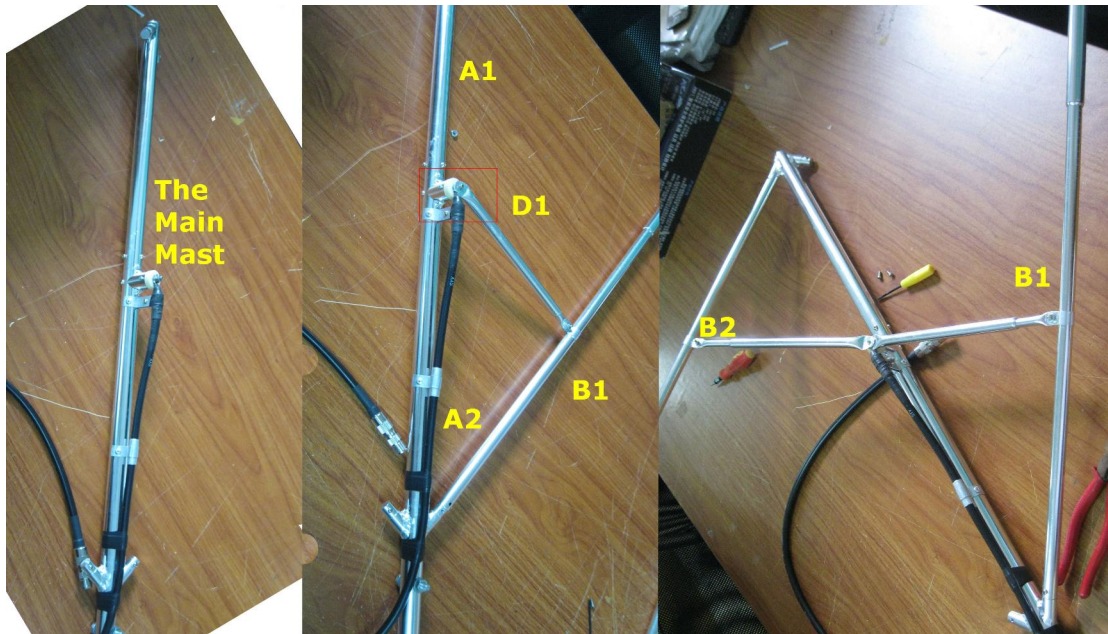


We can install the antenna by following the steps below:

Step1: Unscrew the nut of connected parts on D1. Connect one end of B1 to D1

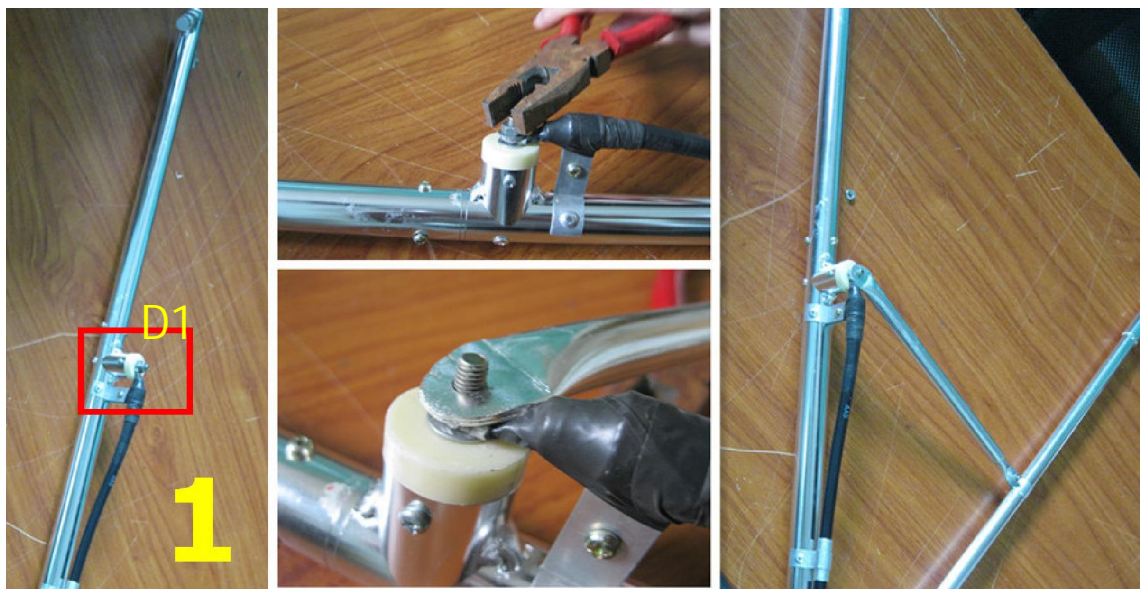



Step2: Connect another end of B1 to A2

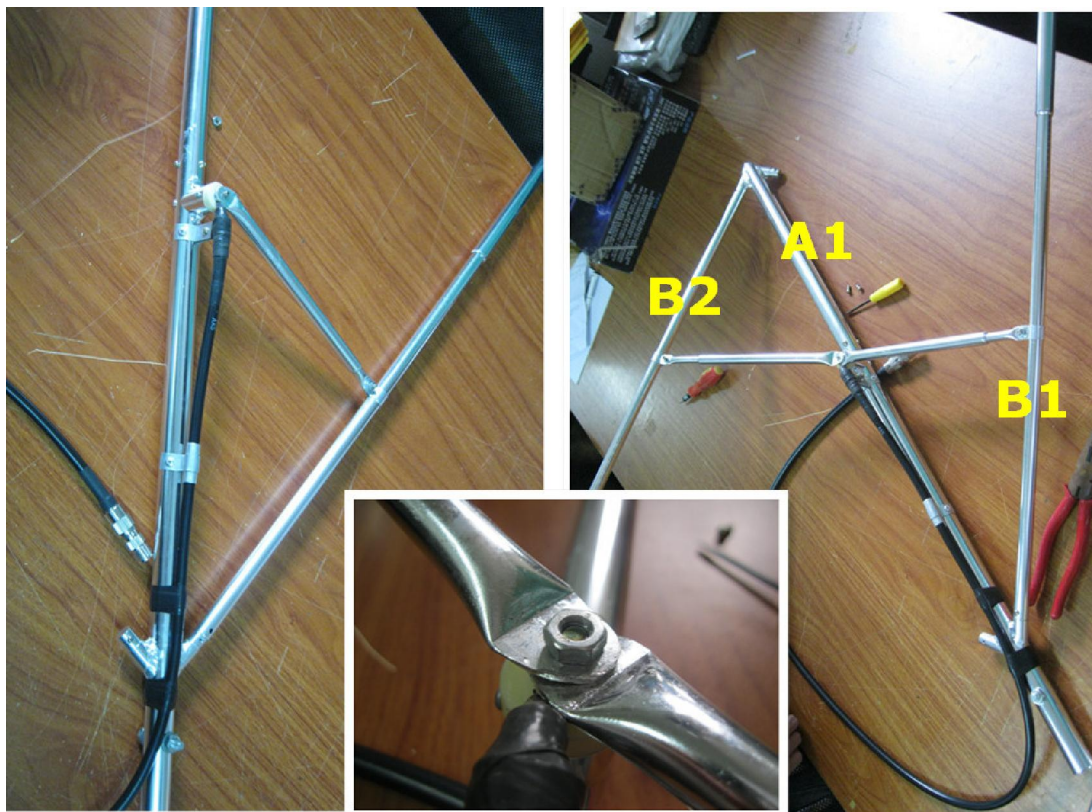


Step 3:

Connect one end of B2 to D1, Connect another end of B2 to A1


After that, lock nut and all screws

IV. Install C1 on A1 (C2 on A2)

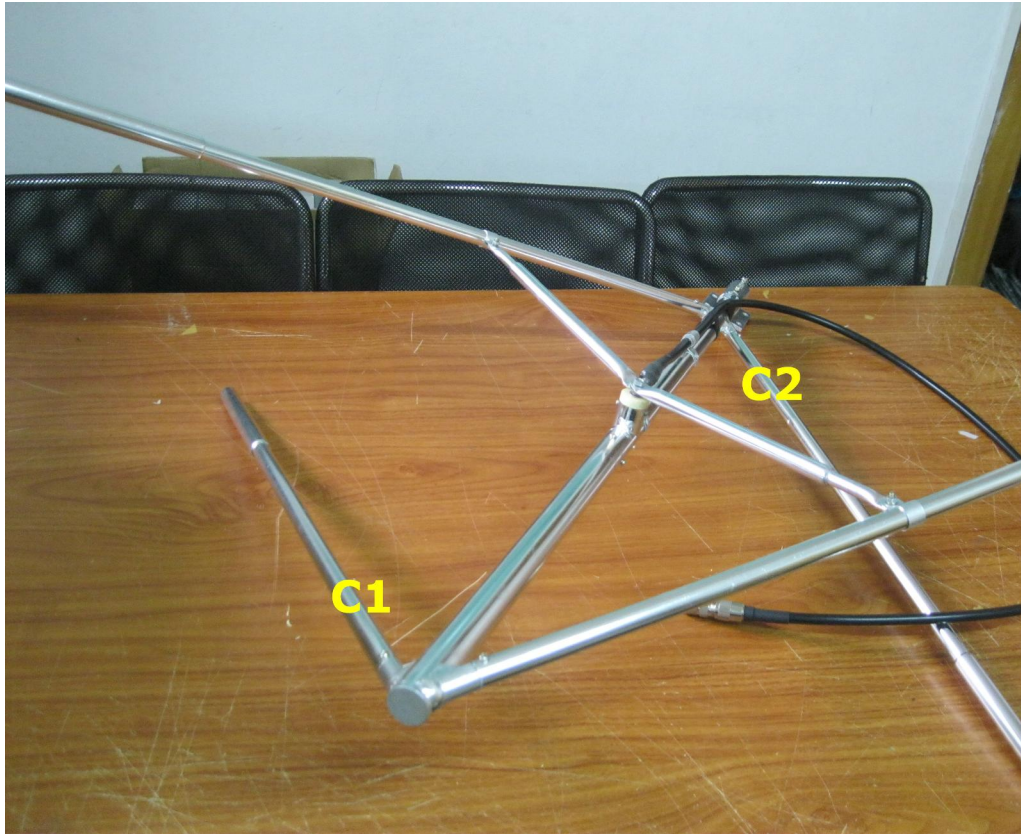

By now, antenna installation is completed.

V. Frequency adjustment

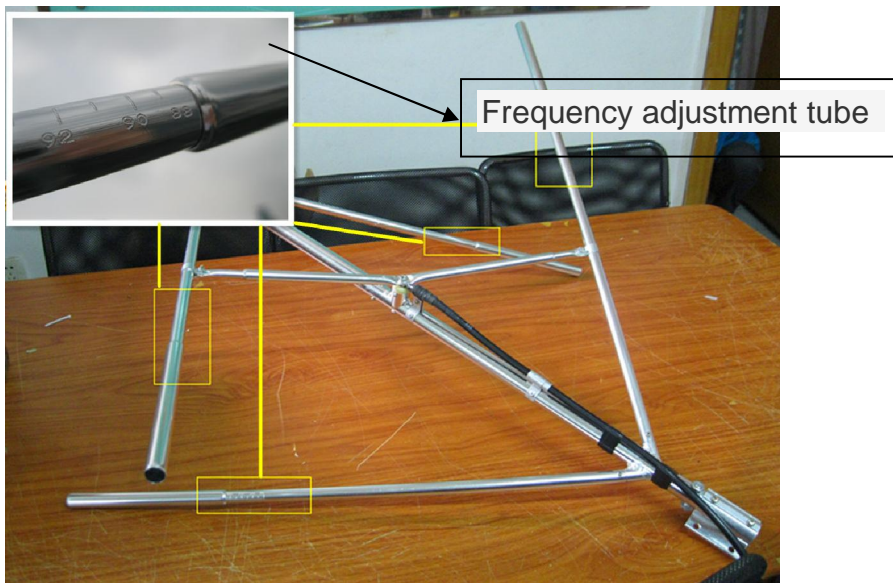

Frequency adjustment tube, Make A1, A2, B1, B2 oscillators frequency be consistent with the transmitter frequency